



Features

- High sensitivity (0.1% of I_n)
- Tuned to either 50 Hz or 60 Hz
- 2nd & 3rd harmonic & HF noise suppression
- Optional reset functions Instantaneous (Fast), definite time, count down
- 40-300V DC auxiliary supply Power supply fail relay drops out if the auxiliary supply fails.
- Optional 20-70V DC supply
- Low CT burden & high thermal rating
- Optional 1A or 5A CT input
- Instantaneous pick up LED
- Configurable output contacts
- 0-31s time delay (125ms steps)
- Push button / electrical flag reset
- Non-volatile trip indication
- Multi voltage inhibit / enable input
- Multi voltage flag reset input
- Size 2M draw out case

Application


The main earth fault protection relays in distributions systems, power stations & large manufacturing / processing plants can fail to detect a high impedance breakdown to earth causing hazard to human life & potential damage to plant & equipment. In these & other situations demanding extra sensitive earth fault protection, the 2C138 relay using solid state techniques, can be applied to detect earth currents down to 0.1% or 0.5% of the CT nominal current.

The relay is tuned to reject 2nd & higher harmonic frequencies to avoid problems under quiescent conditions. An adjustable time delay is built in to provide stability during switching & other transient disturbances & to allow adequate grading with other protection systems at high fault current levels.

The relay can be connected in the residual circuit of three line current transformers, or to a neutral, or core balanced CT. The case is fitted with a CT shorting switch to avoid an inadvertent open circuit when the relay module is removed from the case.

2C138 **Technical Bulletin**

Sensitive Earth Fault Relay

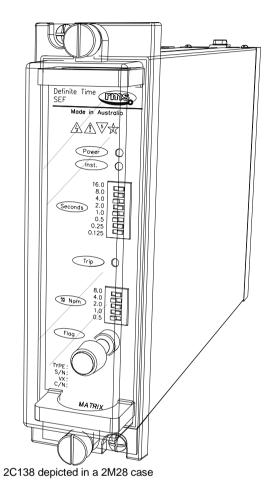

Operation

The 2C138 SEF relay provides sensitive earth fault protection with a high degree of accuracy over a wide range of input current settings & offers the high sensitivity & harmonic suppression required for this application. The harmonic suppression feature combined with high frequency noise immunity minimizes any possibility of malfunction.

The 2C138 also offers an adjustable time delay, to manage situations where high impedance faults develop slowly, ensuring the main protection operates on high fault currents. An instantaneous output contact may be configured.

 
Current & time settings are fully adjustable using DIL switches readily accessible on the front panel of the relay & provide a high level of repeatability & accuracy. Visual indication of an output relay operation is provided by a non volatile LED indicator which may be hand or remotely reset.

A configurable status input is provided to ENABLE the operation of the 2C138 on application or removal of a control voltage.

The 2C138 may be configured with a number of different reset functions to provide instantaneous reset, definite time reset or induction disc reset emulation.

A switchmode power supply provides a very wide auxiliary operating range. A relay fail alarm is provided in the form of a C/O contact which is picked up when the auxiliary supply is healthy.

Made in Australia





Time Delay Options

INSTANTANEOUS OPERATION

Due to the stiff harmonic filtering the minimum pick up time of the SEF element is <75ms at 2x Is.

Where output contact 3 is configured for instantaneous operation it will pick up when Is> the current pick up threshold irrespective of the front panel time delay setting.

Set configuration switch 3 to ON to enable instantaneous operation of output contact 3.

TIMER DELAY SETTING RANGE

0 to 31s in 125ms steps.

Output contacts 1 & 2 always operate in time delayed mode. Output contact 3 will also operate in time delayed mode provided configuration switch 3 is set to OFF.

TIME DELAY SETTING CHANGES

The time delay & function settings should only be changed when the timing initiate LED is extinguished. Time delay settings are read at the beginning of each timing sequence.

TIMING ACCURACY


Maximum timing error as a % of setting + uncertainty in ms.

	AC Rejection Filter		
Initiate input	ON	ON OFF	
DC	-0.19% + 0.25ms		
AC	N/A	-0.19% + 19ms	

Table 1

CONFIGURATION SWITCHES

 Configuration switches are accessible to the user & can be set by withdrawing the relay module & following the instructions on the side plate label. A bank of 5 switches are provided as depicted below & are read each time the 2C138 is powered up:





While the function of the configuration switches may vary for special custom models, the standard functions & default settings are described in the Ordering Information section.

SENSING INPUT RESET OPTIONS (Refer timing diagrams) The reset characteristic is set using configuration switches 4 & 5.

If the SEF element drops out before the pre set time delay is reached the timing element will reset in 20 to 50 ms at 10x ls.


Definite Time Reset (Treset)

 
With this reset option a definite reset time must be specified. If the SEF element drops out before the preset time delay is reached the delay timer will pause until the reset time has elapsed before resetting. If the SEF element picks up again before the reset time has elapsed, the delay timer will restart the timing sequence from the paused timing point.

Count Down Reset

If the SEF element drops out before the pre set time delay is reached, the timer will count down toward reset. If the SEF element picks up again before reset is reached the timer will start counting back up towards the time delay pre set.

RESET CHARACTERISTICS

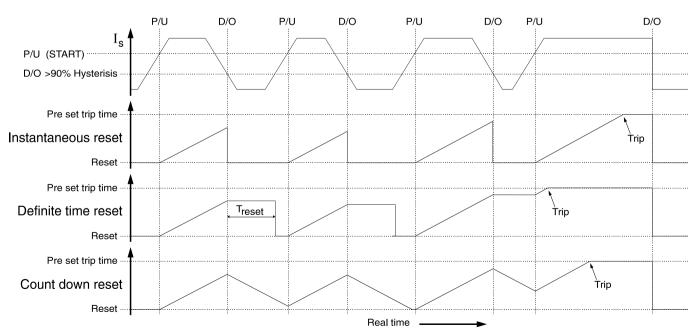





AUXILIARY SUPPLY

40-275V AC / 40-300V DC or 20-70V DC switchmode supply.

STATUS INPUT OPERATING VOLTAGE (AC rejection filter)

The operating range of the status inputs are set using internal configuration switch 1. This setting may be pre defined when ordering.

Set Configuration Switch to ON

In this mode the universal status input will reject AC signals that may be induced on the control wiring. Suitable for high security applications where a DC battery supply is available.

18 - 300V DC & 18 – 275V AC Set Configuration Switch to OFF In this mode the universal status input is designed to operate on both AC & DC input voltages. Suitable for applications where an AC auxiliary voltage is available such as transformer or generator control panels.

STATUS INPUT MINIMUM OPERATING CURRENT

10mA P/U for 1ms then reducing to1.5mA after 4ms.

While the function of the configuration switches may vary for special custom models, the standard functions & default settings are described in the Ordering Information section.

STATUS INPUT OPERATING TIME

		AC Rejection Filter	
Initiate input	Minimum	ON	OFF
DC	P/U	<16ms	<4ms
	D/O	<4ms	<16ms
AC	P/U	N/A	<23ms
	D/O	IN/A	<33ms

Table 2

Technical Data

BURDENS

At 110V DC nominal supply Auxiliary supply:

Less than 5W independent of range with output

relays picked up.

Sensing circuits: At nominal <1VA 1A <1.5VA 5A

CT INPUT IMPEDANCE At nominal 1A CT: <1 ohm 5A CT: <0.06 ohm

CT INPUT THERMAL WITHSTAND (Amps all settings)

	1A CT	5A CT
Continuous	2	10
4.5s	20	100
3s	35	180
2s	40	200
1s	60	300
0.5s	90	450

AC CURRENT SETTING

Code A & E: 0.5% - 15.5% of 1A CT in 0.5% steps 0.5% - 15.5% of 5A CT in 0.5% steps 0.5% - 15.5% of 5A CT in 0.5% steps 0.1% - 3.1% of 1A CT in 0.1% steps 0.1% - 3.1% of 5A CT in 0.1% steps Code B & F: Code C & G: Code D & H:

DROPOUT PICKUP RATIO OF SEF ELEMENT

PCB jumper J118 fitted left – Factory default PCB jumper J118 fitted right as per figure 1. 95% setting: 85% setting:

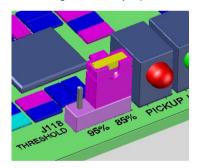


Figure 1:

 
To change the dropout / pickup ratio remove the relay module from the case, locate the three pin jumper header position J118 & fit jumper for 95% or 85% dropout pickup ratio.

CURRENT SETTING ACCURACY

+/-5% of setting +/-0.05% of nominal

HARMONIC REJECTION

>20x setting for 2nd harmonic frequencies & above.





FRONT PANEL INDICATORS

Three LED indicators are provided on the front panel:

Power On solid when auxiliary supply healthy Green Timina Flashing during timing Amber Trip On solid when output relay operated Red

The trip LED status is stored in non volatile memory & will is restored when the 2C138 is powered up after loss of the auxiliary supply. The preserved trip LED state is reset using the front panel flag reset button or status input.

A hand & remote reset magnetic disc flag (permanent memory) indicator may be specified as an option. Note that an auxiliary supply is required to reset the flag circuits.

RELAY FAIL ALARM

A C/O alarm contact is maintained in the energized state when all of the following conditions are met:

- The auxiliary supply is applied
- The internal 24V DC rail is within acceptable limits
- The CPU hardware watchdog maintains a pulsing output

A CPU software watchdog records "suspect" events to an assert register and if necessary performs a soft restart.

OUTPUT RELAY CONTACT CONFIGURATION

2 N/O time delayed contacts

1 N/O time delayed or instantaneous contact

OUTPUT CONTACT DWELL TIME

Once operated all time delayed output contacts have a minimum dwell time of 100ms.

REMOTE FLAG RESET INPUT

Application of a control voltage to the optional remote flag reset input will cause the bistable flag to be reset.

Technical Data

OUTPUT CONTACT RATINGS

IEC60255-0-2

Carry continuously 5A AC or DC 0.5s 20A AC or DC Make & carry L/R ≤ 40ms & V ≤ 300V 0.2s 30A AC or DC AC resistive 1,250VA

Break capacity AC inductive 250VA @ PF ≤ 0.4

I ≤ 5A & V ≤ 300V DC resistive 75W 30W @ L/R ≤ 40ms

DC inductive 50W @ L/R ≤ 10ms

106 at maximum load Minimum number of operations 0.5W limit 10mA / 5V Minimum recommended load

TRANSIENT OVERVOLTAGE

Between all terminals & earth Between independent circuits without damage or flashover

INSULATION COORDINATION

Between all terminals & earth Between independent circuits Across normally open contacts

AUXILIARY SUPPLY

Allowable breaks / dips in supply

Collapse to zero from nominal voltage

IEC60255-5 CLASS III 5kV 1.2/50us 0.5J 5kV 1.2/50us 0.5J

IEC60255-5 CLASS III 2.0kV RMS for 1 minute 2.0kV RMS for 1 minute 1.0kV RMS for 1 minute

IEC60255-11

≤ 20ms

HIGH FREQUENCY DISTURBANCE IEC60255-22-1 CLASS III

2.5kV 1MHz common mode ≤ 3% variation 1.0kV 1MHz differential mode

ELECTROSTATIC DISCHARGE IEC60255-22-2 CLASS III

6kV contact discharge ≤ 5% variation

RADIO FREQUENCY INTERFERENCE IEC60255-22-3

10V/m, 80 TO 2,700MHz ≤ 5% variation

FAST TRANSIENT IEC60255-22-4

4kV, 5/50ns, 100KHz repetitive ≤ 5% variation

CONDUCTED RFI IEC60255-22-6

≤ 5% variation 10V, 0.15 to 80MHz

TEMPERATURE RANGE

-5 to +55°C Operating: Storage: -25 to +75°C

HUMIDITY IEC68-2-1/2

40 °C & 95% RH non condensing


Size 2M28-S draw out 28 M4 screw terminals


Flush panel mount or 4U high 1/8 width 19 inch rack mount

 




Wiring Diagram

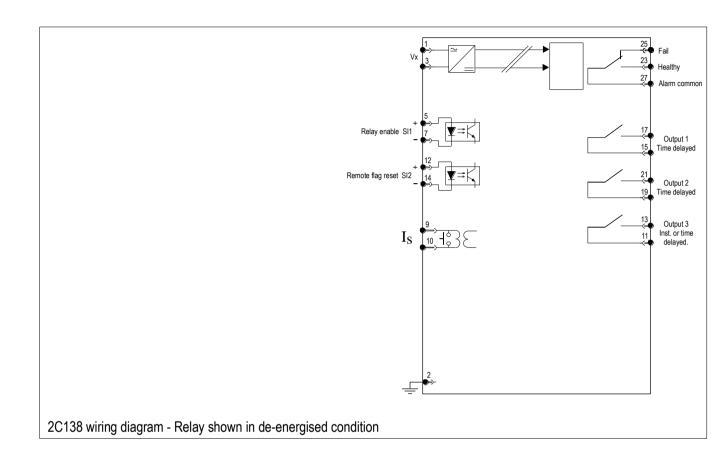

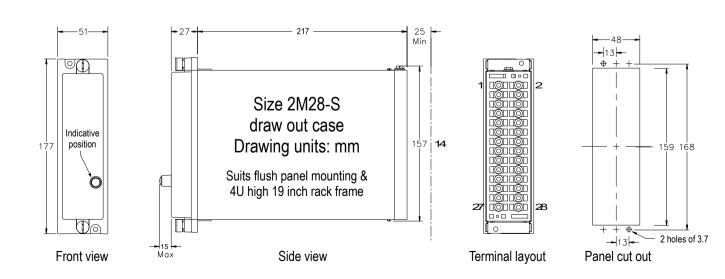



Case Earth

Shorting

link

2M28 Case terminations (REAR VIEW)

12

26

28



Ordering Information

ORDER CODE

The order code determines the production build in the factory & cannot be changed in the field.

Generate the required order code as follows: e.g. 2C138-BAA





1 AUXILIARY SUPPLY RANGE

A 20-70V DC

B 40-275V AC & 40-300V DC

2 CT INPUT RATING & SENSITIVITY

A 1A 0.5% – 15.5% (50 Hz) E 1A 0.5% – 15.5% (60 Hz) B 5A 0.5% – 15.5% (50 Hz) F 5A 0.5% – 15.5% (60 Hz) C 1A 0.1% – 3.1% (50 Hz) D 5A 0.1% – 3.1% (50 Hz) H 5A 0.1% – 3.1% (60 Hz)

3 TRIP FLAG

A Red LED non volatile trip indication (Standard)

B Magnetic disc trip flag

CONFIGURATION CODE

(Optional specification)

The configuration code can be set in the field by withdrawing the relay module & following the instructions on the side plate label.

The configuration code may be specified at time of order so that the relay will be shipped from the factory pre-set to meet customer requirements. e.g. CONFIG-01011

If a configuration code is not specified the factory default will be set as indicated below. i.e. CONFIG-11111

Specify factory Configuration

CONFIG

	Configuration Switches						
	1	2	3	4	5		
-							

1 STATUS INPUT OPERATION

1 ON DC operation only - AC rejection ON (Default)

0 OFF AC / DC operation - AC rejection OFF

2 RELAY ENABLE INPUT

1 ON Apply volts to enable (Default)

0 OFF Remove volts to enable

3 OUTPUT RELAY FUNCTION

ON Output contact 3 operates instantaneously when Is> current pick up threshold irrespective of the front panel time delay settings (Default)

0 OFF All outputs contacts are time delayed

4 RESET TIME FUNCTION

1 ON Instantaneous reset characteristic (Default)

0 OFF Time delayed reset characteristic

5 TIME DELAYED RESET CHARACTERISTIC

1 ON 10s definite time reset * (Default)

0 OFF Count down reset

Note: * Consult factory for other definite time reset delays.



RMS Mors Smitt A **Wabtec** Company

RMS Mors Smitt 19 Southern Court Keysborough, VIC 3173, Australia Tel: +61 (0)3 8544 1200 sales.rms@wabtec.com

Wabtec Netherlands B.V. Darwinstraat 10 6718 XR Ede, Netherlands Tel: +31 (0)88 600 4500 sales.msbv@wabtec.com





Visit www.morssmitt.com/rms for the latest product information. Due to RMS continuous product improvement policy this information is subject to change without notice