



# **UMD-U200** relay - Voltage monitoring

**Datasheet** 

UMD-U200 relay is obsolete from Feb 1, 2017. Replacement by MTDV4-U200 relay



## Description

Plug-in electronic voltage monitoring relay with one change-over contact and one normally open contact. The pull-in voltage is adjustable with a lockable knob. The relay can also be supplied with a fixed pull-in voltage (no knob). The UMD-U200 offers a very small hysteresis (difference between pull-in and drop-out voltage) and does not need an auxiliary supply.

The relay is equipped with two LEDs which indicate the presence of power supply and contact switching.

The construction of the relay and choice of materials makes the UMD-U200 relay suitable to withstand low and high temperatures, shock & vibrating and dry to humid environments. No external retaining clip needed as integrated 'snap-lock' will hold relay into socket under all circumstances and mounting directions.

Compact design, choice of many options and a wide range of sockets makes the UMD-U200 relay an easy and flexible solution to use.

## Application

These relay series are designed for demanding rolling stock applications. The UMD-U200 is used in applications for voltage monitoring or where switching is activated by a fixed voltage level.

#### atures

- Voltage monitoring relay
- · Compact plug-in design
- 1 C/O contact and 1 N/O contact
- Pull-in voltage adjustable with a lockable knob
- Also available with fixed pull-in voltage (no knob)
- · Very small hysteresis
- No auxiliary supply necessary
- Two LEDs for status indication
- Flat, square and silver plated relay pins for excellent socket connection
- Integrated snap lock
- Optional positive mechanical keying relay to socket

#### **Benefits**

- Proven reliable
- Long term availability
- Easy to maintain
- Low life cycle cost
- No maintenance

#### Railway compliancy

- EN 50155 Electronic equipment used on rolling stock for railway applications
- IEC 60571 Electronic equipment used on railway vehicles
- IEC 60077 Electrical equipment for rolling stock in railway applications
- IEC 60947 Low voltage switch gear and control gear
- IEC 61373 Rolling stock equipment -Shock and vibration test
- IEC 60947-5-4 Electromechanical components for control applications.
   This standard examines both coil and contact specifications in depth
- EN 50121 Electromagnetic compatibility for railway applications
- NF F 16-101/102, EN45545-2 Fire behaviour - Railway rolling stock
- NF F 62-002 On-off contact relays and fixed connections

















# Functional and connection diagrams

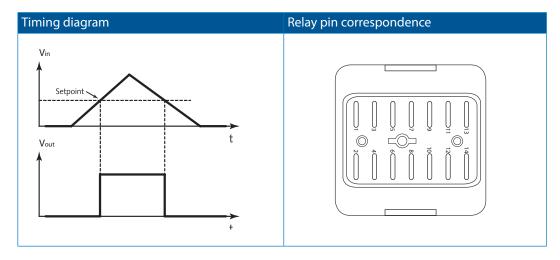

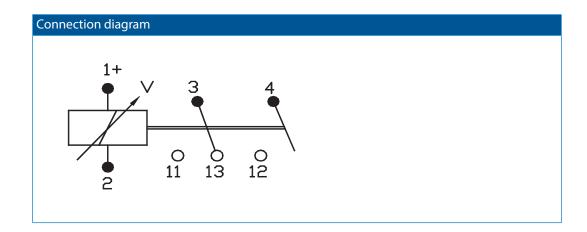







## Time delay specifications

Maximum permissible continuous voltage	1.30 Unom
Maximum permissible ripple	20 %
Accuracy - adjustment	< 2.5 % of full scale value
	After adjusting / fixed voltage setting: no variation in
	setpoint
Accuracy - repeatability	± 2.0 %
Voltage variation - vs. temperature variation	± 0.1 % / K
Hysteresis	≤ 2.0 %
Delay time for pull-in and drop-out	Approx. 0.2 s

Example pull-in voltage setting:

UMD-U204: full scale value is 140 V, pull-in voltage set on 100 V. The pull-in voltage will be between 96.5 V...103.5 V.

For example: 100 V. The ambient temperature is 40 degrees Celsius which is 20 degrees different compared to the standard 20 degrees Celsius. This results in 2.0 % extra voltage variation. The total voltage variation is then 2.0 % (repeatability) + 2.0 % (temperature variation) = 4.0 %. In this case the pull-in voltage will be between 96 V and 104 V.

### Coil characteristics

Туре	Unom (VDC)	Uadjst. min (VDC)	Uadjst. max (VDC)	Power consumption (W)
UMD-U201	24	18	30	< 0.3
UMD-U202	48	35	60	< 0.6
UMD-U203	72	55	90	< 0.8
UMD-U204	110	80	140	<1.0
UMD-U205	96	70	120	< 1.0
UMD-U207	36	27	45	< 0.5
UMD-U215	220	150	260	<1.6

Other types on request







## **Contact characteristics**

Amount and type of contacts	2 C/O
Maximum make current	15 A
Maximum continuous current	6 A (AC1 ; IEC 60947)
Maximum switching voltage	300 VDC (then max. current = 300 mA)
	250 VAC (then max. current = 2.6 A)
Minimum switching voltage	12 V
Minimum switching current	10 mA
Maximum switching capacity	See graph page 6
Contact resistance	15 mΩ (initial)
Material	Ag standard (optional Au on Ag)
Contact gap	0.3 mm
Contact force	> 200 mN

Note: contacts cannot have a different position (forced contacts, weld-no-transfer)

## **Electrical characteristics**

Dielectric strength	EN 50155
Cont-coil	IEC 60077 2 kV, 50 Hz, 1 min
Insulation between open contacts	1 kV; 50 Hz; 1 min
Pulse withstanding	IEC 60255-5 5 kV (1.2 / 50 μs)

## Mechanical characteristics

Mechanical life	30 x 10 <sup>6</sup> operations
Maximum switching frequency	Mechanical: 3600 ops/h
	Electrical: 1200 ops/h
Maximum torque value screw to lock knob	0.15 Nm
Weight	130 g (without options)









## **Environmental characteristics**

Environmental EN 50125-1 and IEC 60077-1

Vibration IEC 61373, Category I, Class B, Body mounted Shock IEC 61373, Category I, Class B, Body mounted

Operating temperature -25 °C...+70 °C (with option C : -40 °C)

Humidity 95 %

Salt mist IEC 60068-2-11, class ST4

Damp heat IEC 60068-2-30, Test method Db variant 1
Protection IEC 60529, IP40 (relay on socket)

Fire & smoke NF F 16-101, NF F16-102, EN 45545-2

Insulation materials

Cover: polycarbonate

Base: polyester










## Dimensions (mm)

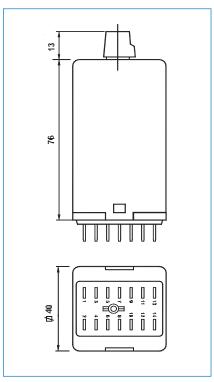

# **Options**

Code	Description	Remark	Cannot becombined with:
С	Low temperature (-40 °C)		E**
E*	Au; Gold plated contacts (10 μm)		C**
K	Extra dust protection	Only for fixed voltage setting	
Keying	Coil coding relay and socket		
Colour coding	Coloured cover for coil voltage coding		

* Gold plated contacts characteristics	
Material	Ag, 10 μm gold plated
Maximum switching voltage	60 V (higher voltages may be possible, contact
	Mors Smitt for more information)
Maximum switching current	400 mA (at higher rate gold will evaporate, then the standard silver contact rating of minimum 10 mA and 12 V is valid)
Minimum switching voltage	5 V
Minimum switching current	1 mA
** Options C and E combined is possible deper	nding on the application. Contact Mors Smitt for more information.











## Switching capacity and contact life

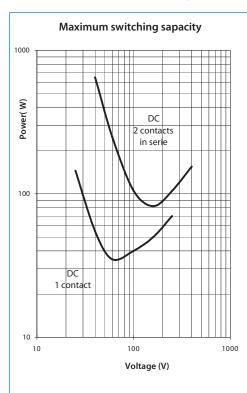

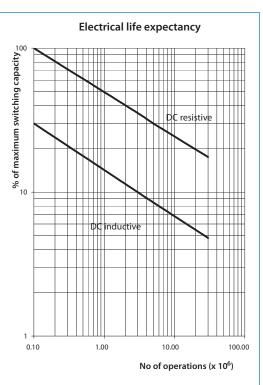

- Step 1: Determine switching voltage out of the application.
- Step 2: Pick the maximum switching capacity (in Watt) at this voltage, out of graph maximum switching capacity.
- Step 3: Calculate the actual switched load (in Watt) out of the application.
- Step 4: Calculate the % of maximum switching capacity:

  Actual load

  Max switching capacity
- Step 5: Pick the life at this load out of the graph Electrical life expectancy.









# UMD-U200 relay Sockets

# Mounting possibilities/sockets



#### Surface/wall mounting

338000302 \ \\	V22BR	Screw socket, wall mount, front connection (9 mm terminals)
338000580	V23	Screw socket, wall mount, front connection (7.5 mm terminals)
338000610	V29	Spring clamp socket, wall mount, front dual connection (2.5 mm²)

#### Rail mounting

338000580	V23	Screw socket, rail mount, front connection (7.5 mm terminals)
338000402	V23BR	Screw socket, rail mount, front connection (9 mm terminals)
338000610	V29	Spring clamp socket, rail mount, front dual connection (2.5 mm²)

### Panel/flush mounting

338100100	V3	Solder tag socket, panel mount, rear connection
328400100	V26	Crimp contact socket, panel mount, rear connection, A260 crimp contact
338000560	V31	Faston connection socket, rear dual connection (6.3 mm)
338000570	V33	Spring clamp socket, flush mount, rear dual connection (2.5 mm²)

#### **PCB** mounting

338000561	V32	PCB soldering socket	
TO 1 41	4 4		

For more details see datasheets of the sockets







# UMD-U200 relay Keying

## Mechanical keying relay and socket (optional)






#### Function:

- To prevent wrong installation
- To prevent damage to equipment
- To prevent unsafe situations

Using keyed relays and sockets prevents a relay is inserted in a wrong socket. For example it prevents that a 24 VDC relay is put in a 110 VDC circuit. Positive discrimination is possible per different function, coil voltage, timing, monitoring, safety and non-safety.

The D-relay socket keying option gives  $8 \times 8 = 64$  possibilities. Upon ordering the customer simply indicates the need for the optional keying. Mors Smitt will assign a code to the relay and fix the pins into the relay. The sockets are supplied with loose key receptacles. Inserting the keys into the socket is very simple and self explaining.

Remark: Sockets and relay shown are only examples.

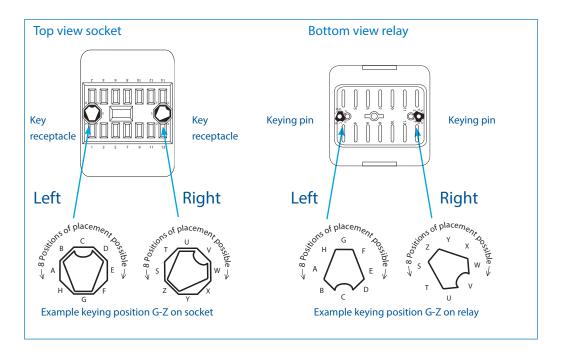







# UMD-U200 relay Instructions

## Installation, operation & inspection

#### Installation

Before installation or working on the relay: disconnect the power supply first! Install socket and connect wiring according to the terminal identification. Plug relay into the socket ensuring there is no gap between the bottom of relay and the socket. Reverse installation into the socket is not possible due to the mechanical blocking snap-lock feature. Check to ensure that the coil connection polarity is not reversed. Relays can be mounted tightly together to save space.

When rail mounting is used, always mount the socket in the direction of the UP arrow, to have proper fixation of the socket on the rail.

#### Warning!

- Never use silicon in the proximity of the relays.
- Do not use the relay in the presence of flammable gas as the arc generated from switching could cause ignition.
- To remove relays from the socket, employ up and down lever movements. Sideway movement may cause damage to the coil wires.



After installation always apply the rated voltage to the coil to check correct operation.

Long term storage may corrode the silver on the relay pins. When plugging the relay into the socket, the female bifurcated or trifurcated receivers will automatically cut through the corrosion on the pins and guarantee a reliable connection.

Before actual use of relays, it is advised to switch the load several times with the contacts. The contacts will both be electrically and mechanically cleaned due to the positive wiping action. Sometimes a contact can build up increased contact resistance ( $\leq 15~\text{m}\Omega$  when new). When using silver contacts one can clean the contact by switching a contact load a few times using >24 VDC & ~2 A. Increased contact resistance is not always problematic, as it depends on circuit conditions. In general a contact resistance of 1  $\Omega$  is no problem. Consult Mors Smitt for more information

Condensation in the relay is possible when the coil is energised (warm) and the outside, environmental temperature is cold. This is a normal phenomenon and will not affect the function of the relay. Materials in the relay have no hygroscopic properties.

#### Inspection

Correct operation of the relay can easily be checked as the transparent cover provides good visibility of the moving contacts. If the relay does not seem to operate correctly, check for presence of the appropriate coil voltage and polarity using a suitable multimeter. If a LED is fitted, it indicates voltage presence to the coil. If coil voltage is present, but the relay does not operate, a short circuit of the suppression diode is possible (This may be due to the coil connection having been reversed).

If the relay doesn't work after inspection, replace the relay unit with a similar model. Do not attempt to open the relay cover or try to repair. Contacts are calibrated and in balance, touching can affect proper operation. Also re soldering may affect correct operation. Since 2009 relays have tamper proof seals fitted and once broken, warranty is void.

Most relay defects are caused by installation faults such as over voltage, spikes/transients, high/short current far exceeding the relay specifications. When returning the relays for investigation, please provide all information on the RMA form. Send defective relays back to the manufacturer for repair or replacement. Normal wear and tear or external causes are excluded from warranty.







# **UMD-U200 relay** Ordering scheme

Configuration:

UMD-U2 04 - K 87 V

1. Relay model

2. Coil voltage

3. Options 4. Fixed voltage settings (optional)

This example represents a UMD-U204-K87V.

Description: UMD-U200 series relay, Unom: 110 VDC, special dust protection, 87 Volt fixed setting

1. Relay model

UMD - U2

#### 2. Coil voltages

01 24 VDC
02 48 VDC
03 72 VDC
04 110 VDC
05 96 VDC
07 36 VDC
15 220 VDC

#### 3. Options

C Low temp. (-40 °C)
 E Gold plated contacts
 K Special dust protection (only for fixed voltage setting)

Upon ordering indicate keying if necessary.















#### **Mors Smitt France SAS**

Tour Rosny 2, Avenue du Général de Gaulle, F - 93118 Rosny-sous-Bois Cedex, FRANCE T +33 (0)1 4812 1440, F +33 (0)1 4855 9001 E sales.msf@wabtec.com

#### Mors Smitt Asia Ltd.

29/E, Fun Towers, 35 Hung To Road Kwun Tong, Kowloon, HONG KONG SAR T +852 2343 5555, F +852 2343 6555 E sales.msa@wabtec.com

#### Mors Smitt B.V.

Vrieslantlaan 6, 3526 AA Utrecht,
NETHERLANDS
T +31 (0)30 288 1311, F +31 (0)30 289 8816
E sales.msbv@wabtec.com

#### Mors Smitt Technologies Inc.

1010 Johnson Drive, Buffalo Grove, IL 60089-6918, USA T +1 847 777 6497, F +1 847 520 2222 E salesmst@wabtec.com

#### Mors Smitt UK Ltd.

Graycar Business Park, Barton under Needwood, Burton on Trent, Staffordshire, DE13 8EN, UK T +44 (0)1283 722650 F +44 (0)1283 722651 E sales.msuk@wabtec.com

#### RMS Mors Smitt

6 Anzed Court, Mulgrave, VIC 3170, AUSTRALIA T +61 (0)3 8544 1200 F +61 (0)3 8544 1201 E sales.rms@wabtec.com



## www.morssmitt.com