

High Speed Tripping Relays

RMS	Alstom	Reyrolle	Functional Description	Contacts	6R MATRIX	Case
6RJ11-5	MVAJ11, MVAJ051	TR112	Low burden high speed trip relay Self reset contacts	5	2HSM502	2M28-S
6RJ11-10	MVAJ11, MVAJ101	TR112	Hand reset flag	10		
6RJ12-5	MVAJ16, MVAJ052	-	Low burden high speed trip relay Self-reset contacts and hand reset flag	5	2HSM521	2M28-S
6RJ12-10	MVAJ16, MVAJ102	-	2s drop out delay Aux. supply required	10		
6RJ13-5	MVAJ13, MVAJ053	TR121	Low burden high speed trip relay	5	2HSM504	2M28-S
6RJ13-10	MVAJ13, MVAJ103	TR121	Hand reset contacts & flag	10		
6RJ14-5	MVAJ14, MVAJ054	TR131	Low burden high speed trip relay	5	2HSM506	2M28-S
6RJ14-10	MVAJ14, MVAJ104	TR131	Electrical reset contacts Independent hand reset flag	10		
6RJ15-5	MVAJ15, MVAJ055	TR141	Low burden high speed trip relay	5	2HSM509	2M28-S
6RJ15-10	MVAJ15, MVAJ105	TR141	Hand & electrical reset contacts Independent hand reset flag	10		
6RJ21-5	MVAJ21, MVAJ051	TR212	High burden high speed trip relay	5	2HSM512	2M28-S
6RJ21-10	MVAJ21, MVAJ101	TR212	Self reset contacts	10		
6RJ21-20	MVAJ201	TRA212	Hand reset flag	20	2HSM520	4M56-S
6RJ22-5	MVAJ26, MVAJ052	-	High burden high speed trip relay	5	2HSM521	2M28-S
6RJ22-10	MVAJ26, MVAJ102	-	Self-reset contacts and hand reset flag	10		
6RJ22-20	MVAJ56	-	2s drop out delay	20		4M56-S
6RJ23-5	MVAJ23, MVAJ053	TR221	High burden high speed trip relay	5	2HSM514	2M28-S
6RJ23-10	MVAJ23, MVAJ103	TR221	Hand reset contacts & flag	10		
6RJ23-20	MVAJ203	TRA221		20		4M56-S
6RJ24-5	MVAJ24, MVAJ054	TR231	High burden high speed trip relay	5	2HSM516	2M28-S
6RJ24-10	MVAJ24, MVAJ104	TR231	Electrical reset contacts	10		
6RJ24-20	MVAJ204	TRA231	Independent hand reset flag	20		4M56-S
6RJ25-5	MVAJ25, MVAJ055	TR241	High burden high speed trip relay	5	2HSM519	2M28-S
6RJ25-10	MVAJ25, MVAJ105	TR241	Hand & electrical reset contacts	10		
6RJ25-20	MVAJ205	TRA241	Independent hand reset flag	20		4M56-S